

Instructions Sheet

Mounting instructions

- For correct mounting please refer to the drilling template and mounting instructions on the back of this sheet.
- Always use at least 3 screws to fix the dispenser.
- For optimum performance avoid installation of the dispenser facing direct sunlight or a reflecting surface.

Batteries


- To install or remove batteries, follow the equipment manufacturer's instructions.
- Keep battery away from small children. If swallowed, consult a physician at once.
- Do not solder the batteries directly. If soldering or welding connection to the battery is required, consult our engineer for proper methods.
- Rechargeable batteries are to be removed from the appliance before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- Do not over-discharge batteries. Force discharging batteries by external power source in a series may cause explosion.
- Non-rechargeable batteries are not to be recharged.
- Alkaline batteries are recommended. Remove batteries from device when it is not in use.
- Do not disassemble or short-circuit batteries. Do not dispose of batteries in fire.
- Do not allow metal objects to contact the battery terminals.

Storage

- Store in a cool, dry place before use.
- Do not keep batteries at temperature of 45°C or above.
- Do not keep batteries at relative humidity of 75% or above.

Safety


- The dispenser is for indoors use only.
- The dispenser must not be cleaned with a water jet.
- The dispenser must be mounted by a qualified person.
- Screwed covers must not be opened.
- The dispenser is maintenance free.
- In case of repairs, the dispenser must be disconnected from the power supply.
- In case of damages, please shut the dispenser (set it out of order) and inform the company.
- Defective dispensers must not be disposed via domestic garbage. Please return. Used batteries are special waste and have to be disposed according to legal rules.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- Working temperature 10°- 45°C.

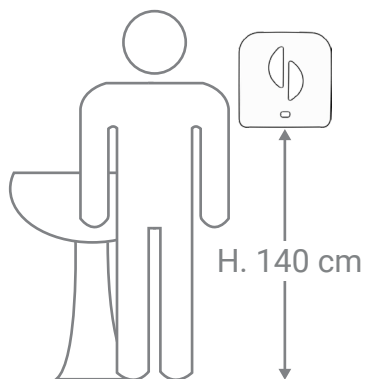

Loading instructions


1

Insert roll into dispenser




2

Slide the paper between rolls with hands




3

Push "paper step" button to introduce the paper

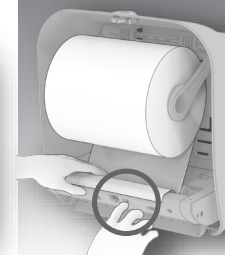

PAPER LENGTH


Use slide switch to select paper length

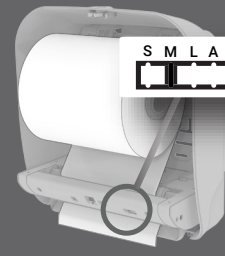





BATTERIES SERVICE


Follow batteries cover for correct insertion

4x D size battery (Alkaline)



LED STATUS

-  Batteries OK
-  Batteries LOW
-  Batteries EMPTY
-  Paper jam



www.sci-services.ch

Paper mode and paper length settings

- The dispenser has 2 paper modes, manual and automatic.
- In manual mode there is the choice between 3 paper length (paper selector set to S=short, M=medium or L=long)
- In automatic mode (paper selector is set to "A"), the sensor has no effect, the paper is dispensed once cutted
- When set to automatic the paper length remains identical to the last paper settings used in manual
- To change the paper length for automatic mode, use the following steps:
 - open the cover and choose the paper length (set the paper selector to "S", "M" or "L")
 - close the cover and dispense one paper
 - open the cover to set the paper selector to "auto", close the cover.
- At power ON, if the selector is already set to "auto", the default paper length is set to M size.

